




The Strength Behind the Beauty



ClearPath® is available in six shower kits which include drain pan plate with integrated drain assembly, TI-ProBoard®, L-angle, fasteners, and sheet waterproof membrane. When used in conjunction with Util-A-Crete® or ProTec® Cement Backer Board or ProPanel® Lightweight Waterproof Backerboard, Fin Pan offers a Lifetime Limited Warranty.





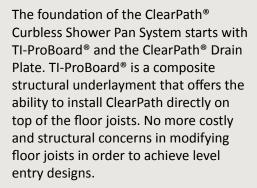

TI-ProBoard® offers a Commercial Floor Rating and can be cut to size and installed with standard tools. The ClearPath® Drain Plate comes with integrated drain assembly and offers flexibility in positioning of plumbing. The drain plate is also pre-pitched and serves as a template for proper sloping of the thin-bed that gets applied on top of the TI-ProBoard® base.



Install ProPanel® Lightweight Backer Board or Pro TEC™ Concrete Backer Board along with a FinPan PreFormed® Niche.





Determine shower area, remove existing subfloor.



Install 2 x 4 blocking with top 1/4" below subfloor level. Connect drain stub to drain plate and secure.



Install TI-ProBoard® perpendicular to joists.



Float sloped ultra thin mud bed.



Allow to cure.



Install sheet membrane.