


ClearPath[®]

Curbless Shower Pan System

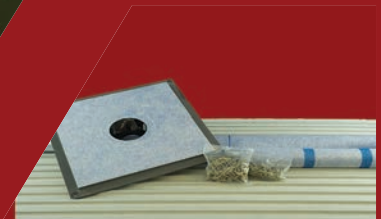

From today's modern design appeal, to ADA or special needs requirements, ClearPath[®] offers people of all ages the freedom to safely enter the shower without the need to climb over a threshold or curb.

A clear path to an easier, more independent lifestyle.

The Strength Behind the Beauty



ClearPath[®] is available in six shower kits which include drain pan plate with integrated drain assembly, TI-ProBoard[®], L-angle, fasteners, and sheet waterproof membrane. When used in conjunction with Util-A-Crete[®] or ProTec[®] Cement Backer Board or ProPanel[®] Lightweight Waterproof Backerboard, Fin Pan offers a Lifetime Limited Warranty.

ClearPath[®]

Curbless Shower Pan System



Determine shower area, remove existing subfloor.



Install 2 x 4 blocking with top 1/4" below subfloor level. Connect drain stub to drain plate and secure.




Install TI-ProBoard[®] perpendicular to joists.




Float sloped ultra thin mud bed.



Allow to cure.

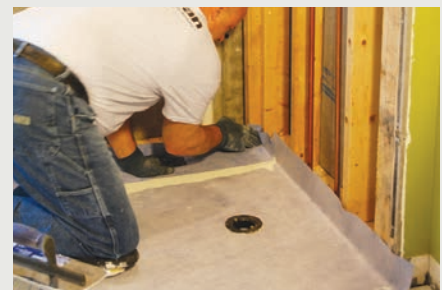

Install sheet membrane.

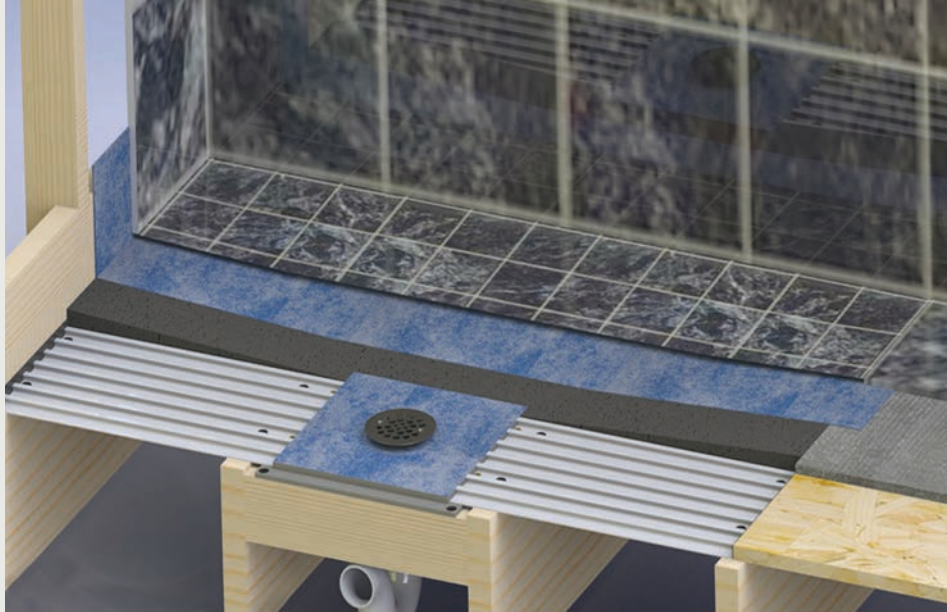

The foundation of the ClearPath[®] Curbless Shower Pan System starts with TI-ProBoard[®] and the ClearPath[®] Drain Plate. TI-ProBoard[®] is a composite structural underlayment that offers the ability to install ClearPath directly on top of the floor joists. No more costly and structural concerns in modifying floor joists in order to achieve level entry designs.

TI-ProBoard[®] offers a Commercial Floor Rating and can be cut to size and installed with standard tools. The ClearPath[®] Drain Plate comes with integrated drain assembly and offers flexibility in positioning of plumbing. The drain plate is also pre-pitched and serves as a template for proper sloping of the thin-bed that gets applied on top of the TI-ProBoard[®] base.



Install ProPanel[®] Lightweight Backer Board or Pro TEC[™] Concrete Backer Board along with a FinPan PreFormed[®] Niche.

www.FinPan.com

