



*The Strength  
Behind the Beauty*

## PreFormed® Shower Pan

Lightweight, waterproof  
shower pan that's easy to  
install and ready-to-tile.




PreFormed Shower Pans adhere to industry standards with 1/4" per foot slope and come standard with integrated side walls, curb and drain assembly. Includes EBBE® drain body & grate.

Drain assembly available in PVC, ABS or field installed Compression Drain.

Available in;  
32" x 60", 34" x 48", 36" x 36", 36" x 42", 36" x 48",  
36" x 60", 42" x 42" & 48" x 48" with center drain

Custom Shower Bases Available

PreFormed Shower Pans meet IAPMO-PS-106 and are cUPC® listed

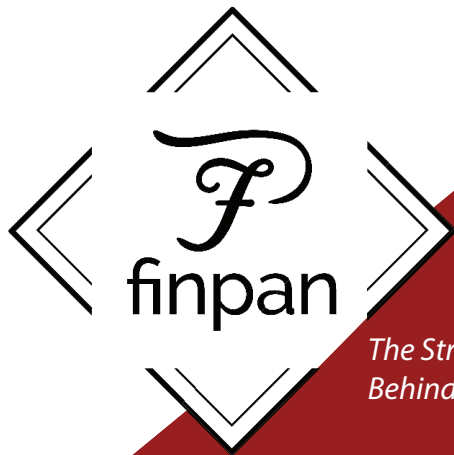

*The Strength  
Behind the Beauty*

## **PreFormed® Shower Pan** Installation (For complete instructions see Data Sheet)

### **Shower Pan Installation for PVC or ABS Drain Assembly**

- Cut out a 5" diameter hole around the 2" drainpipe to allow pan to be inserted into subfloor.

Cut PVC/ABS drainpipe 1 3/8" below floor level.

Test fit pan for fit and level before installing.

Remove pan and apply modified thinset mortar to the floor area and underside of pan using a 1/4" x 1/4" notched trowel.

Apply a liberal coat of PVC or ABS cleaner and solvent cement to the drainpipe and inside the drain where the connection will be made.

Set pan into thinset and apply pressure to achieve complete coverage, insuring that the drain pipe and waste line are properly connected.

Check pan for level set on floor. Apply weight (thinset bags) equally across pan for 30 minutes.

Seal joint between wall backerboard and shower pan walls with supplied fiberglass mesh and WaterArmor Liquid Waterproofing.

### **Drain Strainer Installation**

Screw strainer down to correct height to match tile.

NOTE: If required, cut threads down to adjust strainer to correct height. Pack thinset or pea gravel into area cut out for strainer.

### **Tile Installation**

Install tile using a modified thinset mortar.

